

01 ENCROACHMENT PLAN - LEVEL 01

ENCROACHMENT KEY LEGEND

1. *South along Andalusia:

a. Facade Panels Outer Edge

- 6 feet along column line D and in between column lines 1-13 Level 3
- 6 feet along column line D and in between column lines 5-13- Level 4
- 6 feet along column line D and in between column lines 5-13- Level 5
- 6 feet along column line D and in between column lines 5-13- Level 6
- 6 feet along column line D and in between column lines 1-13 Levels 7-10/Roof

b. Slab Extension

- 8 feet along column line D and in between column lines 1-10 Level 2
- 12 feet along column line D and in between column lines 10-13 Level 2
- 8 feet along column line D and in between column lines 1-5 Level 4
- 8 feet along column line D and in between column lines 1-5 Level 5
- 8 feet along column line D and in between column lines 1-5 Level 6

2. *West along Alley:

a. Facade Panels Outer Edge

- 1 foot along column line 1 and in between column lines A-C– Level 2
- 1 foot along column line 1 and in between column lines A-B Level 3
- 1 foot along column line 1 and in between column lines A-C- Level 4
- 1 foot along column line 1 and in between column lines A-C- Level 5
- 1 foot along column line 1 and in between column lines B-D Levels 7-8
- 1 foot along column line 1 and in between column lines A-D Level 10/Roof

b. Slab Extension

- 18 inches along column line 1 and in between column lines C-D Level 2
- 18 inches along column line 1 and in between column lines C-D Level 4
- 18 inches along column line 1 and in between column lines C-D Level 5
- 18 inches along column line 1 and in between column lines B-D Level 6
- 3 feet along column line 1 and in between column lines A-B Level 6
 3 feet along column line 1 and in between column lines A-B Levels 7-8

3. *North along Alley:

a. Facade Panels Outer Edge

- 1 foot along column line A and in between column lines 1-14 Levels 2-5
- 1 foot along column line A and in between column lines 5-14 Levels 6-8
- 1 foot along column line A and in between column lines 1-14 Level 9-10/Roof

b. Slab Extension

3 feet along column line A and in between column lines 1-5 – Levels 6-8

4. *East along Alley:

a. Facade Panels Outer Edge

• 1 foot along column line 14 and in between column lines C-D – Level 2-10/Roof

5. *North East Corner of Alley:

a. Facade Panels Outer Edge

• 10 foot along column line 14 and in between column lines A-A.6 – Level 2-10/Roof

b. Slab Extension

• 9 foot between column lines 13-14 and column lines A-A.6 – Levels 2-10/Roof

*Note: Encroachments begin at Level 02 (17' feet from ground level to bottom of slab of second level).

03/03

---- Property Line

Facade Panels Outer Edge

Slab Extension - Varies per level

Slab Extension - Constant from

Slab Extension - South -

Constant from Levels 02-10

Levels 02-10 - NE Corner